


**MEBER** 

**MAXIMUM  
STEP STABILITY**

**THICKNESS  
OF 6.5CM ONLY**

# **DYNASTE**

AUTOMATED MECHANICAL STEP

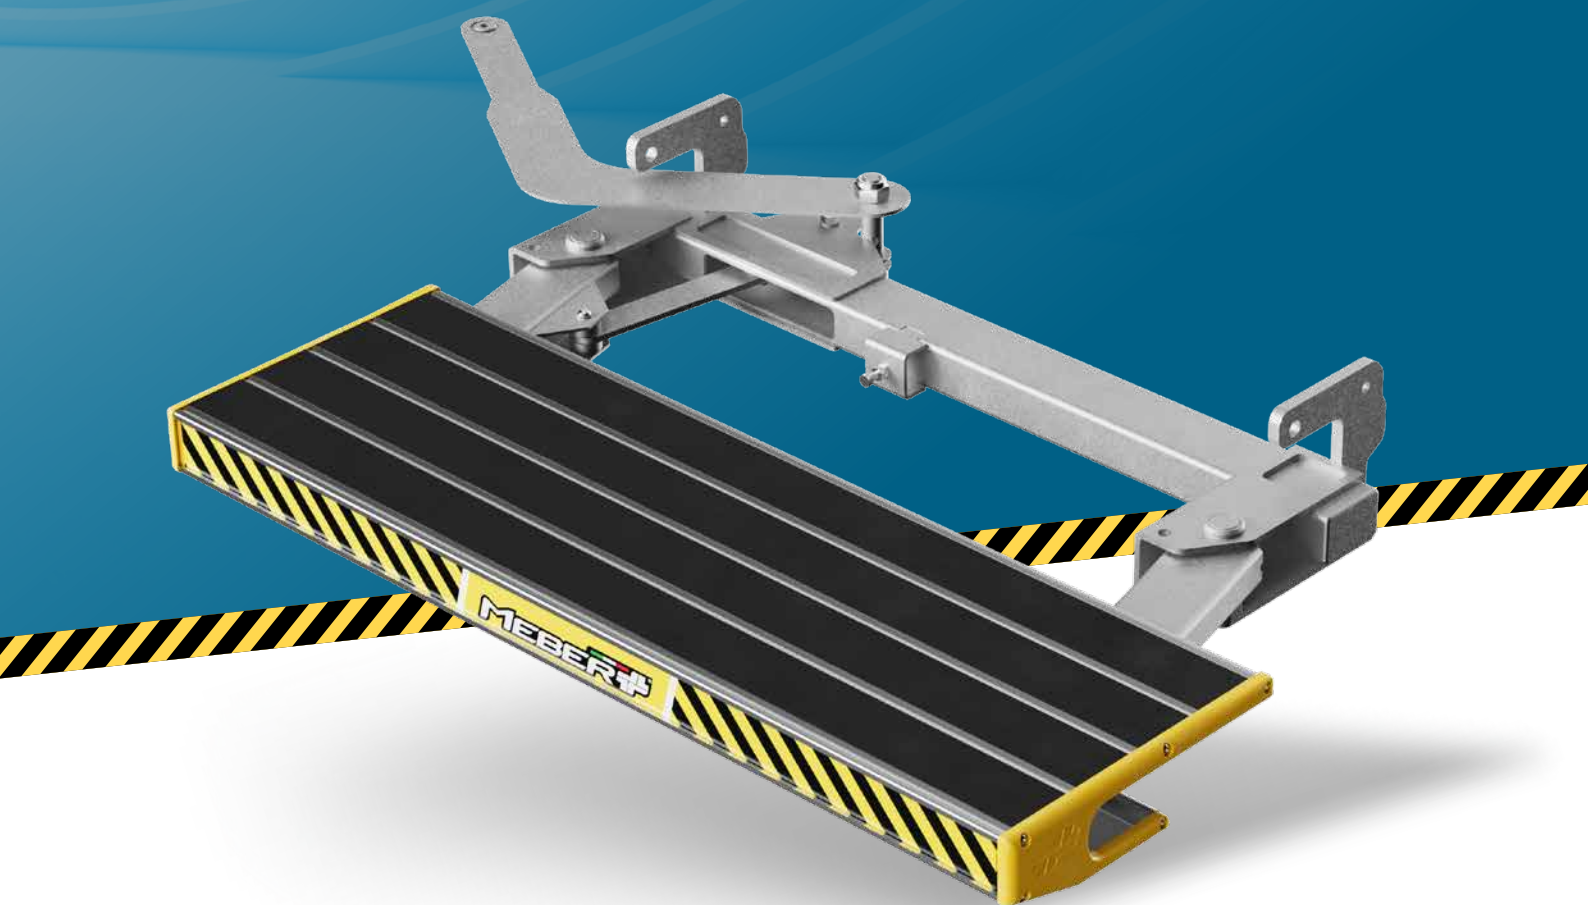

**Ensure safety and comfort  
for all passengers!**


[www.meber.it](http://www.meber.it)

# DYNASTEP

AUTOMATED MECHANICAL STEP

**Reflective  
graphics for  
high visibility**

**Highest safety  
standards with  
hatch-linked opening**

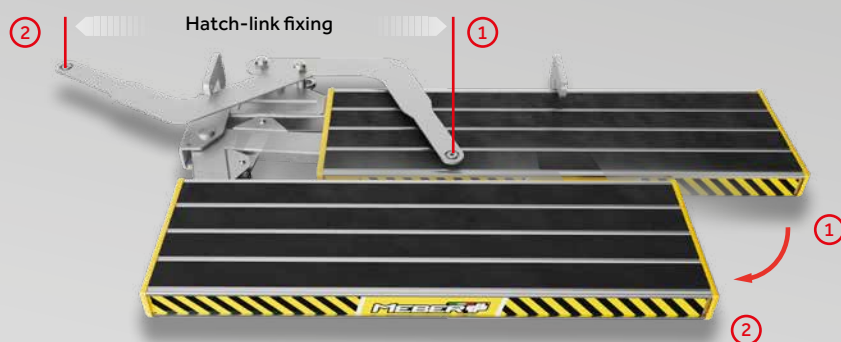

**Suitable for or any commercial vehicle** provided with side doors thanks to specific mounting kits

**800 mm Art. 19302**

**1120 mm Art. 19300**

## DynaStep

### Automated mechanical steps


DynaStep is the new range of automated mechanical steps manufactured by Me.Ber. The range includes two models, with width ranging from 800 to 1120 mm, both made in high quality materials such as aluminium, steel (for moving and support sections) and high-resistance plastic polymers. The total loading capacity amounts to 300 kg, making the steps suitable for bariatric patients. The DynaStep range may be installed on any commercial vehicle provided with side doors, thanks to specific mounting kits that are available as an optional accessory. Four strips of non-slip material ensure safe support even in the presence of water and mud.

**300 kg  
LOADING  
CAPACITY**

**2  
AVAILABLE  
LENGTHS**



# Maximum step stability with the lowest possible thickness

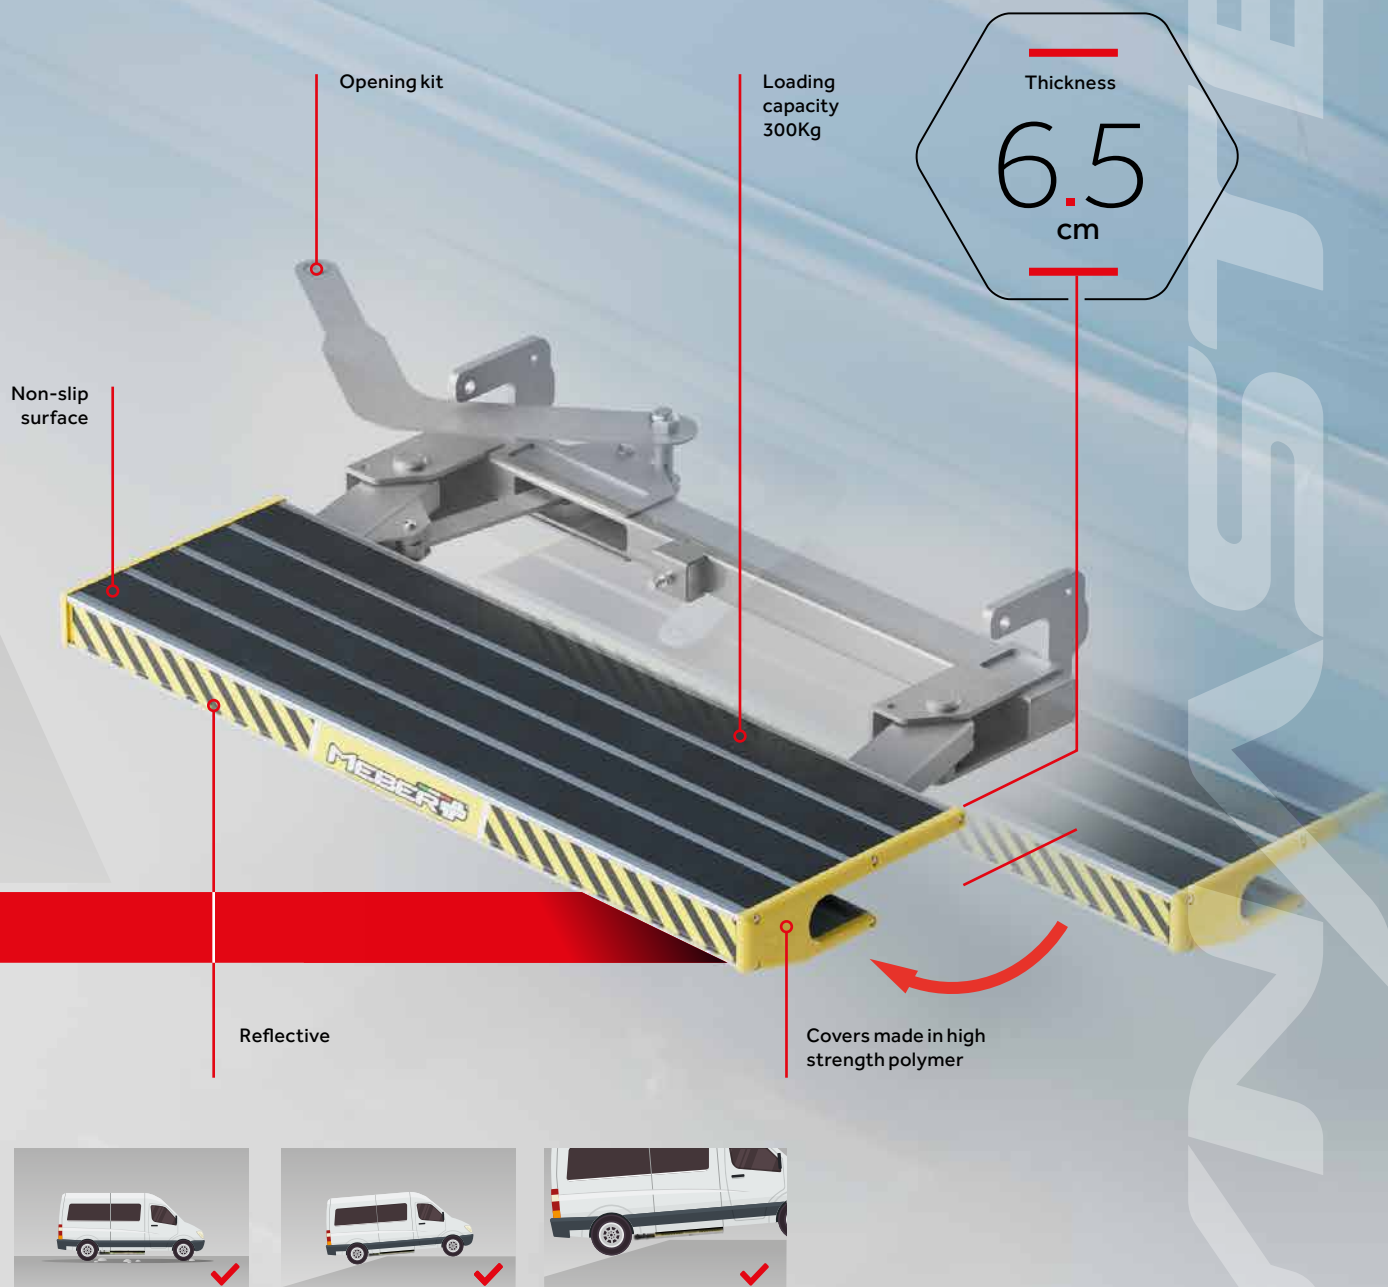

**Opening the step mechanically is dependent on the opening of the side door of the vehicle.**

This solution is fairly convenient as it prevents inadvertent closing or opening of the step. The thickness amounts to 65 mm and is amongst the slimmest in circulation. This feature ensures that the step is opened in all safety even in the presence of bumps, humps and/or sudden slope changes on the road surface. The graphic elements on the devices are reflective, which contributes to making the step highly visible at night or in event of poor visibility.

**MEBER**

# DYNASTEP

DYNASTEP

800 mm



DYNASTEP

1120 mm



All rights are reserved. Me.ber. reserves the right to modify the content without prior notice. Me.ber. srl Unipersonale cannot be held responsible for any damage caused by incorrect or incomplete information. Pictures shown are for illustration purpose only.

## Accessories



Article Code

**19310**


FIAT DUCATO MOUNTING KIT FOR  
DYNASTEP MECHANICAL STEPS AND  
CITROËN JUMPER



Article Code

**19312**

IVECO DAILY MOUNTING KIT FOR  
DYNASTEP MECHANICAL STEPS

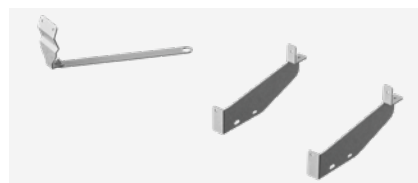

Article Code

**19314**

MERCEDES SPRINTER AND  
VOLKSWAGEN CRAFTY MOUNTING KIT  
FOR DYNASTEP MECHANICAL STEPS

Art.	Model	Platform size	Thickness	Weight	Platform material	Loading capacity
19302	Step 800	820x260 mm	65 mm	17,3 kg	Aluminium	300 kg
19300	Step 1120	1140x260 mm	65 mm	19,3 kg	Aluminium	300 kg

**MEBER**

**Me.Ber. s.r.l. Unipersonale**

[www.meber.it](http://www.meber.it)

Strada Langhirano, 270 43124 Fontanini (Parma) Italy  
Tel. +39 0521 648770 | Fax +39 0521 648780 | e-mail: [info@meber.it](mailto:info@meber.it)